



WASHABLE / REUSABLE HEAVY DUTY AIR FILTER


THIS AIR FILTER HAS DRYFLOW™ MEDIA AND DOES NOT REQUIRE OIL

PART NUMBER: 38-2007S / 38-2014S

Cross references should be used for comparison of filters with similar dimensions. The user assumes all responsibility for verifying that filters are compatible with their application before using these products. Damage may result if the user fails to ensure that the filter is compatible and seals properly before installing the product or operating the engine.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT

STANDARD FLOW

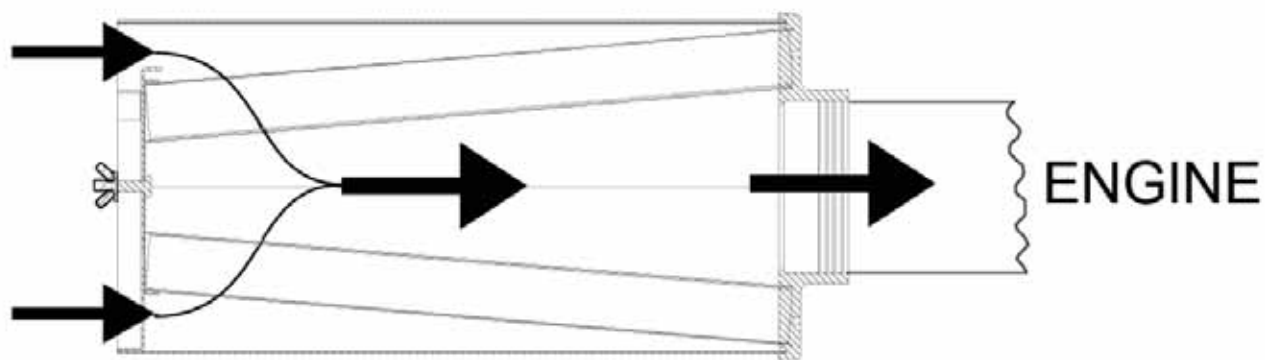

INSTALLATION

1. This air filter is a direct replacement for the ECO-SE air filter, and mounts in the original location with no modifications.
NOTE: Everyone's mechanical ability is different; if you are unsure on how to correctly change your air filter please seek a professional mechanic's help.
2. Reset vehicle air filter restriction gauge before proceeding.

ROAD TEST

1. Start the engine with the transmission in neutral or park and the parking brake engaged. Listen for air leaks or odd noises. For air leaks, check that air filter housing is seated correctly onto air filter and check for tightness of wing nut and clamps. For odd noises, find cause and repair before proceeding.
2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.
3. If road test is fine, you can now enjoy your K&N® Heavy Duty Air Filter purchase.
4. Service air filter at 15"H₂O or once a year.

HOW TO DISASSEMBLE FOR SERVICING

1. Dismount the K&N® air filter assembly from the vehicle.
2. Remove the wing-nut and rubber washer from the K&N® air filter assembly end plate. (Fig. 3-4)
3. Slide the air filter out of the housing. (Fig. 1)

When servicing the air filter follow the K&N® Heavy Duty Cleaning Instructions or access www.knfilters.com® to view online. Use K&N® Heavy Duty Air Filter Cleaner only. CAUTION: DO NOT USE THE STANDARD K&N® AIR FILTER CLEANER OR SERVICE INSTRUCTIONS FOR THIS AIR FILTER.

HOW TO REASSEMBLE

1. To reassemble, insert the air filter into the housing and make sure that the top plate stud protrudes through housing end plate. (Fig. 1)
2. Seat the housing onto the air filter molded base. Sometimes, the housing may be slightly out of round, gently squeeze the sides of the housing as it is being seated onto the air filter molded base. (Fig. 2)
3. Once the air filter top plate stud protrudes through the housing end plate and the housing itself is fully seated onto the air filter mold ed base, reattach the rubber washer and wing-nut onto the threaded stud and tighten securely. (Fig. 3-4)

NOTE: Thread locking compound is recommended on the K&N® air filter wing nut.



Fig. 1



Fig. 2



Fig. 3



Fig. 4

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

• 1455 CITRUS ST., P.O. BOX 1329, RIVERSIDE, CA., U.S.A. 92502 • TECH SERVICE 800-858-3333 • FAX 951-826-4001
• e-mail: tech@knfilters.com • WWW: <http://www.knfilters.com>

19564A
05/02/11